



# EUROPEAN ARROW BOARD GEN 2 PIVOT AX SYSTEM ©

11 Boeing Place, Mount Maunganui 3116 Ph: 07 575 0505

2/11 March Place, Belfast, Christchurch 8051 Ph: 03 323 7507

Email: admin@trafficsigns.co.nz www.trafficsigns.co.nz PO Box 4366, Mount Maunganui South 3149

## FEATURES INCLUDE:

### EAEUAXPS

- ◆ Traffic signs unique NZ designed and made **GEN2 Pivot AX Arrow System©** has less moving parts, comes ready to operate and complies with latest NZTA requirements for **NO** arrow downward operations
- ◆ ASNZ engineered and certified for the following:
  1. Maximum vehicle speed of 110km/h including wind speed of 47km/h in retracted position
  2. Maximum vehicle speed of 50km/h including wind speed of 147km/h in extended position
- ◆ In cab controller for all functions including real time display plus LA12 controller  
*(Patents pending)*
- ◆ 12 month warranty on frame T&C's apply



### MAINTENANCE

- Monthly lubrication is required using "dry glide" or similar type product for the lifting tracks of the board.  
**This is not included as standard**



In Cab Controller



LA12 Arrow Controller



Left Arrow



Right Arrow



Down Position



# INSTRUCTIONS - EUROPEAN ARROW BOARD

11 Boeing Place, Mount Maunganui 3116 Ph: 07 575 0505  
2/11 March Place, Belfast, Christchurch 8051 Ph: 03 323 7507

Email: admin@trafficsigns.co.nz www.trafficsigns.co.nz PO Box 4366, Mount Maunganui South 3149

## Before the remote will work you must make sure the Emergency Control Button

### To Lift Arrow Panel:



Push "Key On" Button (7), light will come on and Down button (5) light will come on, indicating the panel is down.



Push up Button (5) once and Panel will rise until it is in the upright position



Push Down Button (5) to return panel to the original starting position

### Arrow Light Control:



Push "Key On" Button (7) again



Select the Arrow (3) you require to be lit up




Picture 1

Remote Control

### Control Functions:

1. Emergency Butt
2. Battery Tester
3. Arrow Light control / check
4. Lamp Failure
5. Motor Panel control / check
6. External Arrow Bar check
7. Key On

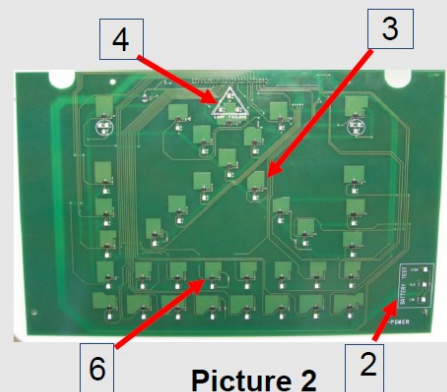

Picture 2  
Circuit Board

### Checks: When unit is turned on check:

- **Failed Lamp** 4 —Red light will appear when one of the 25 lights fail
- **Battery Charge Level** — 2  
Green—Battery Full  
Yellow—Battery 50% charged  
Red—Battery Flat
- **KEY ON** —In order to avoid any involuntary action, pull out Emergency button  
And press KEY ON 7 to activate the other functions on the controller